


Auto-35 Inserter

[Detailed Instructions Click Here](#)

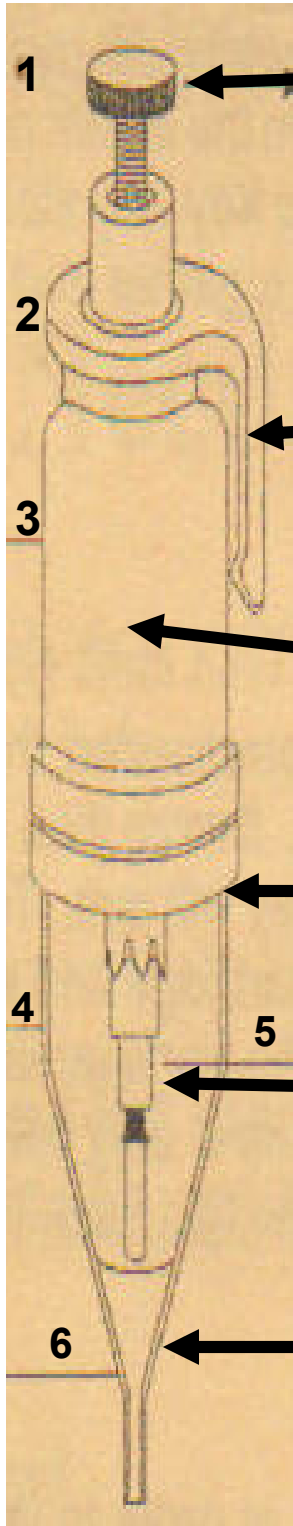

1. Needle Impact Adjustment

Adjusts the intensity which the hammer taps the needle.
Pre-set by manufacturer

2. Needle Release Trigger

Turns the cartridge that allows the needle to drop into the transparent tip.


3. Lite-weight upper body

4. Lite-weight lower body
contains cartridge

5. Needle Depth Adjustment

- Lock Nut
- Lock Washer
- Inserter Hammer

6. Transparent, Replaceable Tip

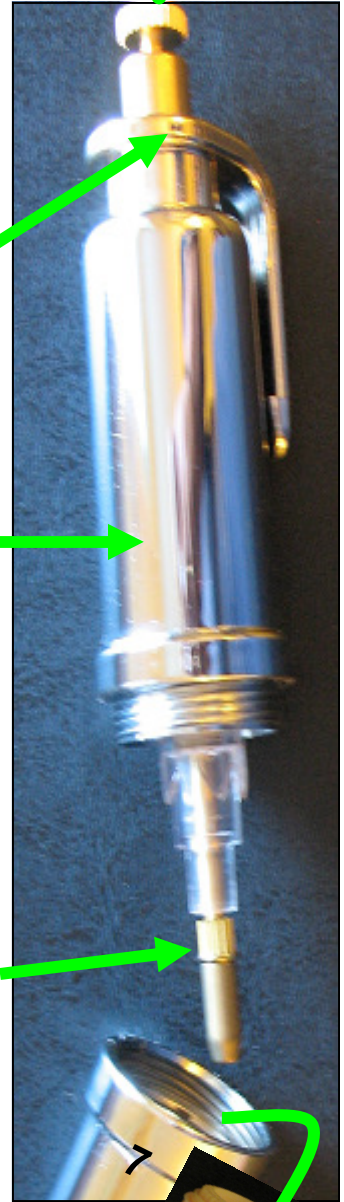

7. 35-Needle Cartridge

